# 立興(楊氏)有限公司

## LIP HING (YEUNG'S) COMPANY LIMITED

### TLA-108 限位撐

"TLA-108" LIMITATION ARM


特徵

物料: **304**不鏽鋼 ❖ 適用於平開窗


#### **Features**

Material: Grade 304 stainless steel


For side hung window use

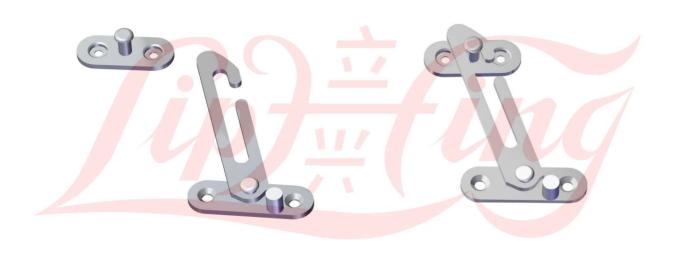

#### TLA-108R-REV

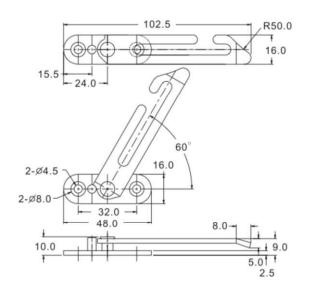

#### TLA-108L-REV

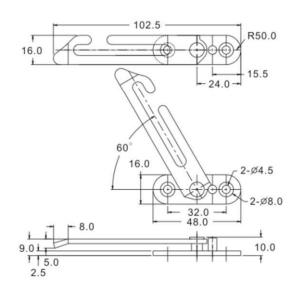

立興(楊氏)有限公司 香港葵涌 葵昌路26-38號 豪華工業大廈8字樓D座 立興楊氏實業(深圳)有限公司 電話 (852) 2412 2288 / 2423 8620 / 2412 2490 | 傳真 (852) 2489 2766 中國廣東深圳市 光明新區 電郵 main@liphingyeungs.com.hk | 網址 sz-liphingyeungs.com 玉塘街道 田寮社區田益一街10號

# 立興(楊氏)有限公司

## **LIP HING (YEUNG'S) COMPANY LIMITED**

### TLA-108 限位撑

"TLA-108" LIMITATION ARM

特徵

 
物料: **304**不鏽鋼 ❖ 適用於平開窗

 
**Features** 

Material: Grade 304 stainless steel

For side hung window use

TLA-180-B-REV





### TLA 限位撐 安裝說明

"TLA" LIMITATION ARM INSTALLATION GUIDELINE

窗較所需空間要求

SPACE REQUIREMENT FOR INSTALLING FRICTION HINGE




# 立興(楊氏)有限公司

## LIP HING (YEUNG'S) COMPANY LIMITED


### TLA 限位撐 使用說明

"TLA" LIMITATION ARM INSTRUCTIONS FOR USE

- #1 當限位撐安裝好後,開窗時限位撐會限開至某個角度,不能再開更大.
  - After "TLA" has been installed, the window can only be opened up to a certain angle.

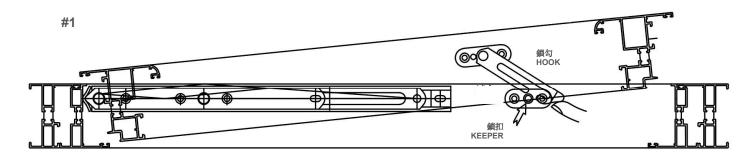

- #2 如要開更大角度的話, 窗扇要稍為關小一點, 然後將鎖勾撥離鎖扣, 再推開窗扇.
  - If the window has to be opened to a larger angle, close the window to a smaller angle and detach the hook from the keeper, then push open the window again.

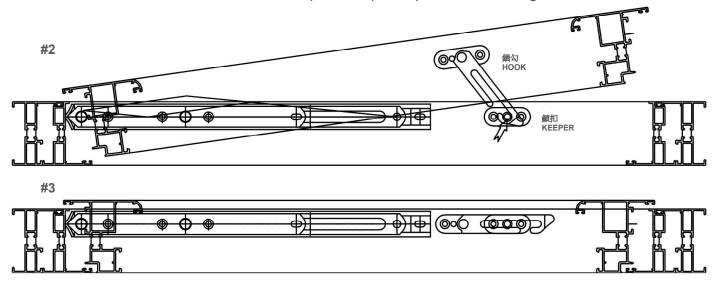

- #3 這是關窗是窗較及窗撐的位置示意圖
  - This shows the position of window hinge and limitation arm when window is closed.